

## **DIMBLK1 system variable**

1431 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1003

### **Function Description:**

The **DIMBLK1** system variable is used to set arrowhead for the first end of extension line when the DIMSAH is on.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Users could enter a Period "." to restore default settings.

Note: the annotative block could not be used as customized arrow for dimensions and leaders.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimblk1-system-variable-1431.html>