

DIMCLRD system variable

1434 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 991

Function Description:

The **DIMCLRD** system variable is used to specify color for extension lines, arrowheads and dimension lines.

Type : Integer

Saved in : Drawing

Initial value : 0

It could also controls the leader color created by **LEADER** command. In "Select Color" dialog box, input "0" to select "**BYBLOCK**"; input "256" to select "**BYLAYER**".

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimclrd-system-variable-1434.html>