

DIMCLRE system variable

1435 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1021

Function Description:

The **DIMCLRE** system variable is used to specify color for extension lines, center marks, and center lines.

Type : Integer

Saved in : Drawing

Initial value : 0

In "Select Color" dialog box, input "0" to select "**BYBLOCK**"; input "256" to select "**BYLAYER**".

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimclre-system-variable-1435.html>