

## **DIMDEC system variable**

1437 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 748

### **Function Description:**

The **DIMDEC** system variable is used to set the number of decimal places in main units for dimensions.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 4 (Imperial) or 2 (Metric)

The previous is based on selected units or angle formats. The specified value will be applied on angular dimension when the **DIMDEC** system variable set to be -1.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdec-system-variable-1437.html>