

DIMDLE system variable

1438 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1101

Function Description:

The **DIMDLE** system variable is used to set the distance the dimension line extends beyond the extension line when oblique strokes are created instead of arrowheads.

Type : Real

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdle-system-variable-1438.html>