

## **DIMDLE system variable**

1438 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1129

### **Function Description:**

The **DIMDLE** system variable is used to set the distance the dimension line extends beyond the extension line when oblique strokes are created instead of arrowheads.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdle-system-variable-1438.html>