

## **DIMDSEP system variable**

1440 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 745

### **Function Description:**

The **DIMDSEP** system variable is used to specify a single character decimal separator for creating dimension whose unit format is decimal.

**Type** : Single character

**Saved in** : Drawing

**Initial value** : . (Imperial) or (Metric)

Input a single character under command prompts.

If the dimension units has set to be decimal, it uses characters that specified by **DIMDSEP**, rather than default decimal point.

If the **DIMDSEP** has set to be NULL, it uses decimal point as dimension separator.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdsep-system-variable-1440.html>