

DIMDSEP system variable

1440 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 736

Function Description:

The **DIMDSEP** system variable is used to specify a single character decimal separator for creating dimension whose unit format is decimal.

Type : Single character

Saved in : Drawing

Initial value : . (Imperial) or (Metric)

Input a single character under command prompts.

If the dimension units has set to be decimal, it uses characters that specified by **DIMDSEP**, rather than default decimal point.

If the **DIMDSEP** has set to be NULL, it uses decimal point as dimension separator.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdsep-system-variable-1440.html>