

## **DIMEXE system variable**

1441 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1178

### **Function Description:**

The **DIMEXE** system variable is used to specify the distance that the dimension line extends the extension line.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.1800(Imperial) or 1.2500(Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimexe-system-variable-1441.html>