

DIMEXE system variable

1441 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1179

Function Description:

The **DIMEXE** system variable is used to specify the distance that the dimension line extends the extension line.

Type : Real

Saved in : Drawing

Initial value : 0.1800(Imperial) or 1.2500(Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimexe-system-variable-1441.html>