

## **DIMEXO system variable**

1442 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1014

### **Function Description:**

The **DIMEXO** system variable is used to specify the distance that the extension line offsets origin.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0625(Imperial) or 0.6250 (Metric)

The **DIMEXO** system variable value determines the minimum offset for constant length of extension lines.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimexo-system-variable-1442.html>