

DIMFIT system variable

1443 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 1169

Function Description:

The **DIMFIT** system variable is used to position the text and arrow in or out the extension line.

Type : Real

Saved in : Drawing

Initial value : 3

Range : 0 ~ 5

System Variable Value:

- 0** : position the text and arrow in the extension line;
- 1** : position the text in the extension line and arrow out the extension line;
- 2** : position the text or arrow in the extension line;
- 3** : position the text and arrow in an optimal style;
- 4** : draw a leader if necessary;
- 5** : don't draw leader.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimfit-system-variable-1443.html>