

## **DIMFRAC system variable**

1444 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 915

### **Function Description:**

The **DIMFRAC** system variable is used to set the fraction format when DIMLUNIT set to 4 (architectural) or 5 (fractional).

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** : horizontal stacked

**1** : diagonal stacked

**2** : not stacked

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimfrac-system-variable-1444.html>