

DIMFRAC system variable

1444 GstarCAD MY /KW July 12, 2021 [System Variables](#) 0 916

Function Description:

The **DIMFRAC** system variable is used to set the fraction format when DIMLUNIT set to 4 (architectural) or 5 (fractional).

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : horizontal stacked

1 : diagonal stacked

2 : not stacked

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimfrac-system-variable-1444.html>