

## **DIMTFILL system variable**

1445 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1103

### **Function Description:**

The **DIMTFILL** system variable is used to control the background of dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

### **System Variable Value:**

**0** : no background

**1** : background of graphic

**2** : specified by DIMTFILLCLR system variable

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtfill-system-variable-1445.html>