

DIMTFILL system variable

1445 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1123

Function Description:

The **DIMTFILL** system variable is used to control the background of dimension text.

Type : Integer

Saved in : Drawing

Initial value : 0

System Variable Value:

0 : no background

1 : background of graphic

2 : specified by DIMTFILLCLR system variable

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtfill-system-variable-1445.html>