

## **DIMTFILLCLR system variable**

1446 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 888

### **Function Description:**

The **DIMTFILLCLR** system variable is used to set color for the background of dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

The color number displays in "Select Color" dialog box. Users could select "**BYBLOCK**" by entering "0"; they could also select "**BYLAYER**" by entering "256."

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtfillclr-system-variable-1446.html>