

DIMTFILLCLR system variable

1446 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 883

Function Description:

The **DIMTFILLCLR** system variable is used to set color for the background of dimension text.

Type : Integer

Saved in : Drawing

Initial value : 0

The color number displays in "Select Color" dialog box. Users could select "**BYBLOCK**" by entering "0"; they could also select "**BYLAYER**" by entering "256."

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtfillclr-system-variable-1446.html>