

## **DIMTMOVE system variable**

1449 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1031

### **Function Description:**

The **DIMTMOVE** system variable is used to set the moving rulers for dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0,1,2

### **System Variable Value:**

**0** : the dimension line and dimension text moves together

**1** : add a leader when moving dimension text

**2** : dimension text could move freely without additional leaders

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtmove-system-variable-1449.html>