

DIMTMOVE system variable

1449 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1047

Function Description:

The **DIMTMOVE** system variable is used to set the moving rulers for dimension text.

Type : Integer

Saved in : Drawing

Initial value : 0

Range : 0,1,2

System Variable Value:

0 : the dimension line and dimension text moves together

1 : add a leader when moving dimension text

2 : dimension text could move freely without additional leaders

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtmove-system-variable-1449.html>