

## **DIMTOFL system variable**

1450 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 932

### **Function Description:**

**The DIMTOFL** system variable is used to control whether to draw dimension line between extension lines (even if the dimension text has placed outside of extension line).

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off(Imperial) or on (Metric)

For radius dimension and diameter dimension, the text, arrowheads, and leaders could be placed outside, but the dimension line could be created internal of circles or arcs.

### **System Variable Value:**

**Off** : if the arrowhead placed outside of measurement points, do not create dimension line between measurement points

**On** : create dimension line between measurement points even if the arrowhead placed outside of measurement points

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtofl-system-variable-1450.html>