

DIMTOH system variable

1451 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1141

Function Description:

The **DIMTOH** system variable is used to control the position of dimension text.

Type : Parameter

Saved in : Drawing

Initial value : On (Imperial) or Off (Metric)

System Variable Value:

Off : align text and dimension line

On : create text horizontally

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtoh-system-variable-1451.html>