

## **DIMTOL system variable**

1452 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 872

### **Function Description:**

The **DIMTOL** system variable is used to add tolerance to dimension text.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

Setting the **DIMTOL** could turn off the DIMLIM system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtol-system-variable-1452.html>