

DIMTOLJ system variable

1453 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 972

Function Description:

The **DIMTOLJ** system variable is used to set vertical justification for tolerance values relative to surface dimension text.

Type : Integer

Saved in : Drawing

Initial value : 1(Imperial) or 0(Metric)

This system variable will not work unless the **DIMTOL** set to be on. The default value for **DIMTOL** is off.

System Variable Value:

0 : bottom

1 : center

2 : top

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtolj-system-variable-1453.html>