

## **DIMTOLJ system variable**

1453 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 974

### **Function Description:**

The **DIMTOLJ** system variable is used to set vertical justification for tolerance values relative to surface dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1(Imperial) or 0(Metric)

This system variable will not work unless the **DIMTOL** set to be on. The default value for **DIMTOL** is off.

### **System Variable Value:**

**0** : bottom

**1** : center

**2** : top

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtolj-system-variable-1453.html>