

DIMFXL system variable

1454 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 956

Function Description:

The **DIMFXL** system variable is used to set the dimension line total length from dimension line to dimension origin.

Type : Real

Saved in : Drawing

Initial value : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimfxl-system-variable-1454.html>