

## **DIMFXLON system variable**

1455 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1083

### **Function Description:**

The **DIMFXLON** system variable is used to control whether to set a constant value for extension line.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : off

When **DIMFXLON** is on, the length of extension line is specified by DIMFXL system variable.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimfxlon-system-variable-1455.html>