

## **DIMGAP system variable**

1456 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1199

### **Function Description:**

The **DIMGAP** system variable is used to set the distance around the dimension text when the dimension line breaks to accommodate dimension text.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 0.0900 (Imperial) or 0.6250 (Metric)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimgap-system-variable-1456.html>