

DIMJOGANG system variable

1457 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 964

Function Description:

The **DIMJOGANG** system variable is used to specify the angle of dimension line transverse part in jogged radius dimension.

Type : Real

Saved in : Drawing

Initial value : 45

Range : 5 ~ 90

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimjogang-system-variable-1457.html>