

## **DIMJUST system variable**

1458 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 887

### **Function Description:**

The **DIMJUST** system variable is used to control the horizontal location of dimension text.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0

**Range** : 0 ~ 4

### **System Variable Value:**

**0** : place text above dimension line, and center- justify between extension lines

**1** : place dimension text next to the first extension line

**2** : place dimension text next to the second extension line

**3** : place dimension text above the first extension line and align them

**4** : place dimension text above the second extension line and align them

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimjust-system-variable-1458.html>