

DIMLDRBLK system variable

1459 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 914

Function Description:

The **DIMLDRBLK** system variable is used to specify arrowhead type for leaders.

Type : Strings

Saved in : Drawing

Initial value : ""

Input a Period "." to restore the default settings(closed- filled arrowhead).

Note: the annotative block could not be used as custom arrowhead for dimension or leader.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimldrblk-system-variable-1459.html>