

## **DIMLDRBLK system variable**

1459 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 931

### **Function Description:**

The **DIMLDRBLK** system variable is used to specify arrowhead type for leaders.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

Input a Period "." to restore the default settings( closed- filled arrowhead).

Note: the annotative block could not be used as custom arrowhead for dimension or leader.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimldrblk-system-variable-1459.html>