

## **DIMLFAC system variable**

1460 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 939

### **Function Description:**

The **DIMLFAC** system variable is used to set scale factors for linear dimension measurements.

**Type** : Real

**Saved in** : Drawing

**Initial value** : 1.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlfac-system-variable-1460.html>