

## **DIMLIM system variable**

1461 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 823

### **Function Description:**

The **DIMLIM** system variable is used to generate dimension limits as the default text.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : off

Specifying the DIMLIM to be on could close the **DIMTOL**.

### **System Variable Value:**

**Off** : dimension limits are not generated as default text

**on** : dimension limits are generated as default text

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlim-system-variable-1461.html>