

DIMLIM system variable

1461 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 825

Function Description:

The **DIMLIM** system variable is used to generate dimension limits as the default text.

Type : Parameter

Saved in : Drawing

Initial value : off

Specifying the DIMLIM to be on could close the **DIMTOL**.

System Variable Value:

Off : dimension limits are not generated as default text

on : dimension limits are generated as default text

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlim-system-variable-1461.html>