

DIMLTEx1 system variable

1462 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 936

Function Description:

The **DIMLTEx1** system variable is used to set the line type for the first extension line.

Type : Strings

Saved in : Drawing

Initial value : ""

The **DIMLTEx1** system variable value is "**BYLAYER**", "**BYBLOCK**", or names of line type.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltex1-system-variable-1462.html>