

## **DIMLTEx1 system variable**

1462 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 935

### **Function Description:**

The **DIMLTEx1** system variable is used to set the line type for the first extension line.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

The **DIMLTEx1** system variable value is "**BYLAYER**", "**BYBLOCK**", or names of line type.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltex1-system-variable-1462.html>