

## **DIMLTEx2 system variable**

1463 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1028

### **Function Description:**

The **DIMLTEx2** system variable is used to set the line type for the second extension line.

**Type :** Strings

**Saved in :** Drawing

**Initial value :** ""

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltex2-system-variable-1463.html>