

DIMLTEx2 system variable

1463 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1035

Function Description:

The **DIMLTEx2** system variable is used to set the line type for the second extension line.

Type : Strings

Saved in : Drawing

Initial value : ""

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltex2-system-variable-1463.html>