

DIMLTYPE system variable

1464 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1012

Function Description:

The **DIMLTYPE** system variable is used to set the linetype of dimension line.

Type : Strings

Saved in : Drawing

Initial value : ""

The **DIMLTEX1** system variable value is "**BYLAYER**", "**BYBLOCK**", or names of linetype.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltype-system-variable-1464.html>