

## **DIMLTYPE system variable**

1464 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1018

### **Function Description:**

The **DIMLTYPE** system variable is used to set the linetype of dimension line.

**Type** : Strings

**Saved in** : Drawing

**Initial value** : ""

The **DIMLTEX1** system variable value is "**BYLAYER**", "**BYBLOCK**", or names of linetype.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimltype-system-variable-1464.html>