

DIMLUNIT system variable

1465 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 982

Function Description:

The **DIMLUNIT** system variable is used to set units for all dimension types(except angular dimension).

Type : Integer

Saved in : Drawing

Initial value : 2

Range : 1,2,3,4,5,6

System Variable Value:

1 : scientific

2 : decimal

3 : engineering

4 : architecture (always stacked displaying)

5 : fractional (always stacked displaying)

6 : Microsoft Windows Desktop (decimal format using Control Panel settings for decimal separator and number grouping symbols)

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlunit-system-variable-1465.html>