

## **DIMLWD system variable**

1466 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1080

### **Function Description:**

The **DIMLWD** system variable is used to specify the lineweight of dimension line.

**Type** : Enum

**Saved in** : Drawing

**Initial value** : -2

**Range** : 0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

### **System Variable Value:**

**-3** : default(the default value is controlled by **LWDEAULT** system variable)

**-2** : byblock

**-1** : bylayer

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlwd-system-variable-1466.html>