

DIMLWD system variable

1466 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1088

Function Description:

The **DIMLWD** system variable is used to specify the lineweight of dimension line.

Type : Enum

Saved in : Drawing

Initial value : -2

Range : 0,5,9,13,15,18,20,25,30,35,40,50,53,60,70,80,90,100,106,120,140,158,200,211

System Variable Value:

-3 : default(the default value is controlled by **LWDEAULT** system variable)

-2 : byblock

-1 : bylayer

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimlwd-system-variable-1466.html>