

DIMRND system variable

1469 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 759

Function Description:

The **DIMRND** system variable is used to round all dimension distances to be the specified value.

Type : Integer

Saved in : Drawing

Initial value : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimrnd-system-variable-1469.html>