

## **DIMRND system variable**

1469 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 764

### **Function Description:**

The **DIMRND** system variable is used to round all dimension distances to be the specified value.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 0.0000

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimrnd-system-variable-1469.html>