

# **DIMSAH system variable**

1470 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1188

## **Function Description:**

The **DIMSAH** system variable is used to control the display of arrowhead block in dimension line.

**Type :** Parameter

**Saved in :** Drawing

**Initial value :** Off

## **System Variable Value:**

**off** : use the arrowhead block set by DIMBLK system variable

**on** : use the arrowhead block set by DIMBLK1 and DIMBLK2 system variable

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsah-system-variable-1470.html>