

DIMSAH system variable

1470 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1151

Function Description:

The **DIMSAH** system variable is used to control the display of arrowhead block in dimension line.

Type : Parameter

Saved in : Drawing

Initial value : Off

System Variable Value:

off : use the arrowhead block set by DIMBLK system variable

on : use the arrowhead block set by DIMBLK1 and DIMBLK2 system variable

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsah-system-variable-1470.html>