

DIMSD1 system variable

1471 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1017

Function Description:

The **DIMSD1** system variable is used to control whether to hide the fist dimension line and arrowhead.

Type : Parameter

Saved in : Drawing

Initial value : Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

System Variable Value:

Off : display the first dimension line

On : hide the first dimension line

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsd1-system-variable-1471.html>