

## **DIMSD1 system variable**

1471 GstarCAD MY /KW July 13, 2021 [System Variables](#) 0 1003

### **Function Description:**

The **DIMSD1** system variable is used to control whether to hide the first dimension line and arrowhead.

**Type** : Parameter

**Saved in** : Drawing

**Initial value** : Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

### **System Variable Value:**

**Off** : display the first dimension line

**On** : hide the first dimension line

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimsd1-system-variable-1471.html>